

REPLACE THE SPINDLE DAMPER

When you replace the spindle damper on your machine, the spindle will not stay still. In order to adjust the spindle stability, you will need to slightly tight the two allen screws located on the bottom of the spindle (See drawing).

Tightening only one screw is usually enough since too much stiffness will decrease the feeling during machining.

